










Buttons	Function	Description
	Decrease Speed	Lowers Fans Speed
	Increase Speed	Increases Fans Speed
	Pressing this button allows the user to monitor each temperature sensor and at the User Interface directly	The "1" displayed on the screen represents the temperature at the User Interface. The "2" and "3" represent the readings of the other temperature sensors. NOTE: An "EE" will display if no temperature sensor is connected
 	Ceiling height program: hold the "PROGRAM" button down while pressing the "+" to cycle through settings.	Auto Mode is preprogrammed to three different ceiling heights options: Low, Medium, and High.
 	Hold the "PROGRAM" button and press "-" to change Fahrenheit to Celsius.	Displays Fahrenheit/Celsius.
	Power	Turns Fans on/off
	Switch from Automatic mode to Manual Mode.	Auto mode increases/decreases fan airflow based on temperature difference between two temperature sensors. Manual mode overrides Auto mode permitting any desired fan speed by using the "+" and "-" buttons to increase/decrease fan speed, respectively.