
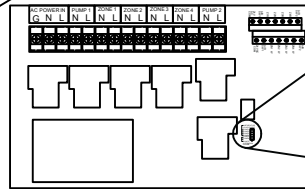
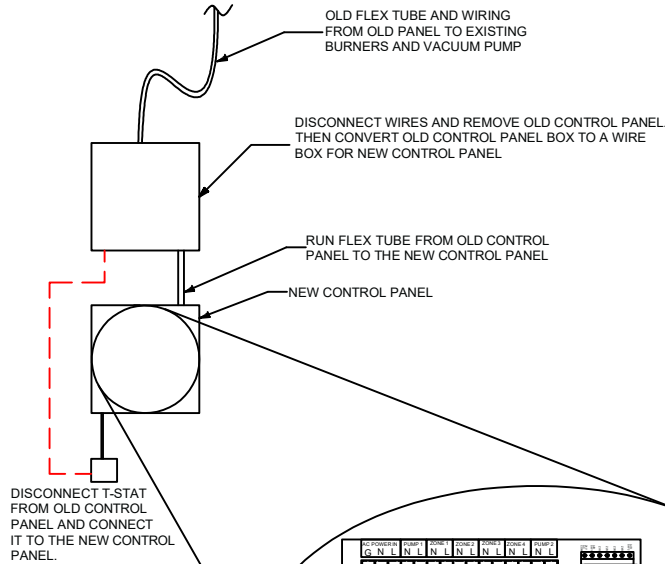


# GUIDE TO REPLACING VINTAGE CONTROL PANELS W/ CURRENT CONTROL PANEL


BY; ENERGY SALES, INC

For questions please contact us at 952-890-2966

## OLD WIRING DIAGRAM

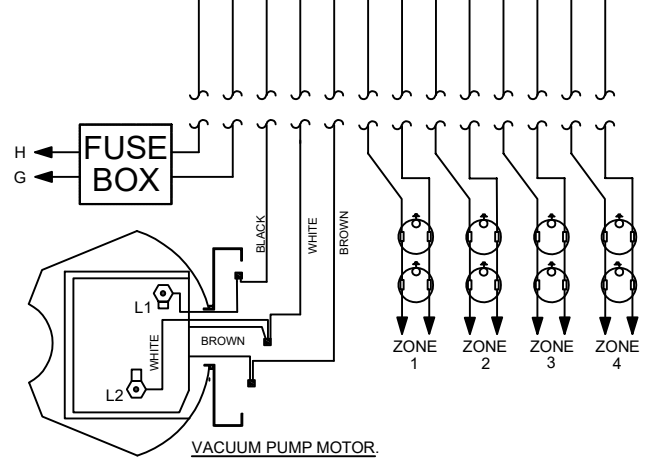

## NEW WIRING DIAGRAM

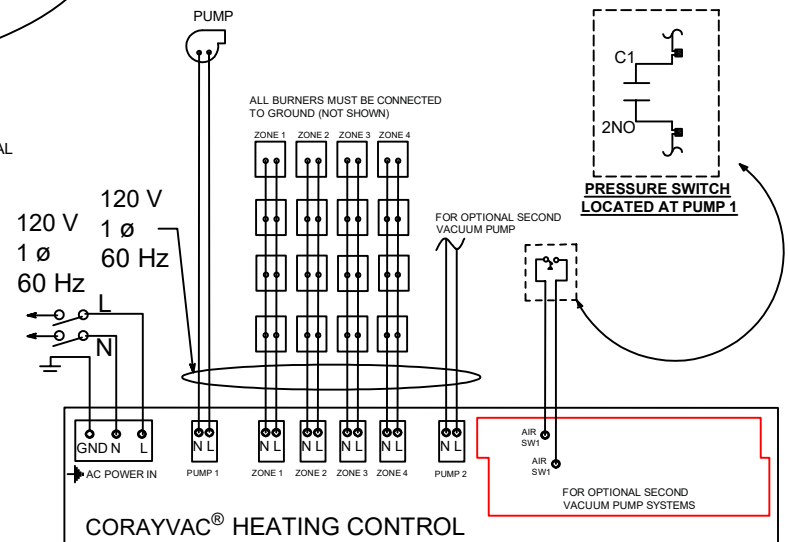


**120V - HOT**  
L1 = T8 BLACK  
T1 BLUE  
T3 ORANGE


**NEUTRAL**  
N = T8 RED  
T2 WHITE  
T2P BROWN

**208/230V - HOT**  
L2 = T4 YELLOW


\*WIRE NOT USED IN APPLICATION DO NOT USE AND CAP

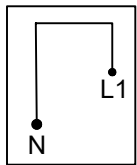

**TO REVERSE ROTATION - CHANGE**  
L1(T5) TO N AND N (T8) TO L1

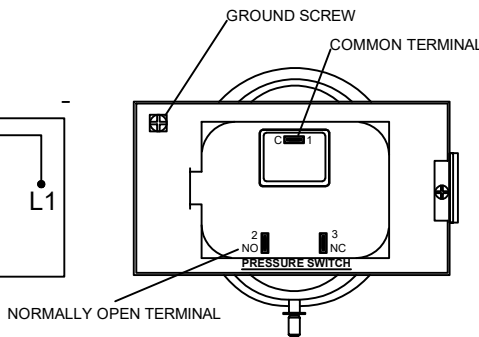

\*Connect the wire leads provided to terminals 1 and 2 labeled (C) Common and (NO) Normally Open.

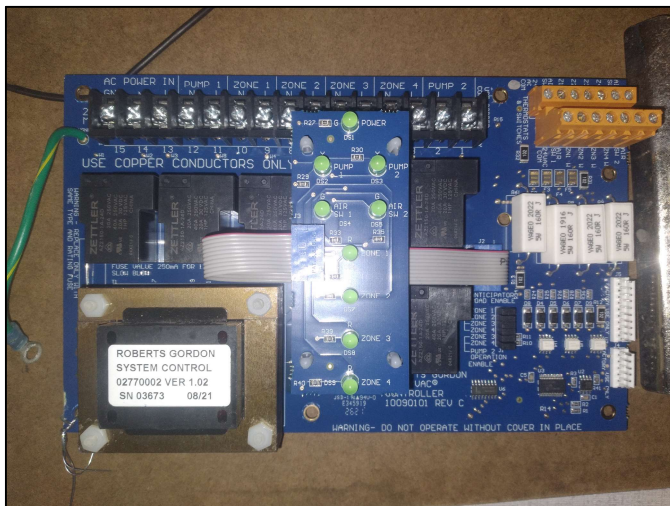

**NOTE:** Some applications may call for zones to operate off a single thermostat. Zones 1 and 3 may share a thermostat and zones 2 and 4 may share a thermostat. At no time should either zone 1 or 3 be connected to zone 2 or 4. Doing so will result in damage to the control board.